


NOTES:

1. LOCATE HANDHOLE AS DIRECTED BY C.O.B. ELECTRIC UTILITY.
2. INSTALL A MINIMUM 8" OF 3/4" CRUSHED ROCK UNDER HANDHOLE.

REF: J&R CONCRETE P-E3

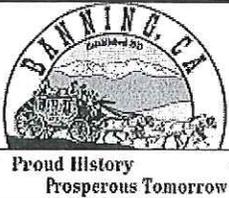

REVISED: 02/04/2013

APPROVED:

[Signature] 2-4-13

STANDARD DRAWINGS

POLYMER CONCRETE HANDHOLE,
10"x15"

SD

600-40